


“HANDS-FREE” CARD: use (2/4)

45605

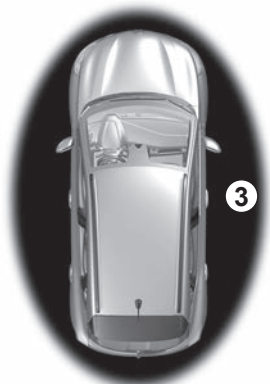

Hands-free unlocking, when approaching the vehicle;

With the card in access zone **3**, the vehicle will unlock. Unlocking is indicated by **one flash** of the hazard warning lights and the indicator lights.

Depending on the vehicle, the door mirrors fold in/out automatically when the vehicle is locked/unlocked
➡ 1.90

45717




Hands-free locking when moving away from the vehicle

With the card on you, doors and luggage compartment door closed, move away from the vehicle: it will lock automatically once you have left the access zone **3**.

Note: the distance at which the vehicle locks depends on the surroundings.

To indicate that the vehicle has been locked, the hazard warning lights **flash twice** and then **light up** for approximately four seconds, and a beep sounds in confirmation.

45672

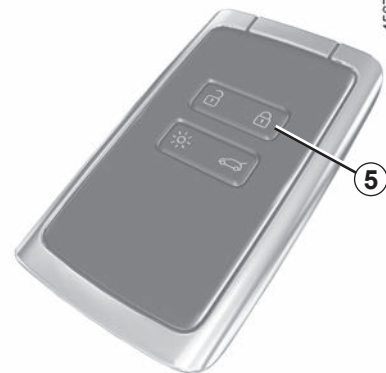

If the card has been within the detection area **3** for approximately 15 minutes, remote locking is disabled. To lock the vehicle, press the **5** button on the card or, depending on the vehicle, the **2** button on the handle **1**.

The vehicle cannot be remotely locked if the card is within the area **4**.